

SRPC

Reducing Port Connector




Connects Fractional SUPERLOK® Port To Male AN

Part No.	Tube O.D. D1 (inch)	Reduced Tube O.D. D (inch)	d	E	l	l1	L
SRPC - 2 - 1	1/8	1/16	0.76	6.09	8.63	2.03	17.27
SRPC - 4 - 1	1/4	1/16	0.76	9.39	8.63	3.55	18.03
SRPC - 4 - 2	1/4	1/8	2.10	9.39	13.46	3.30	22.60
SRPC - 6 - 2	3/8	1/8	2.10	12.70	13.46	3.81	23.11
SRPC - 6 - 4	3/8	1/4	4.40	12.70	15.74	3.30	24.89
SRPC - 8 - 4	1/2	1/4	4.40	15.74	15.74	3.81	29.21
SRPC - 8 - 6	1/2	3/8	6.90	15.74	17.52	3.30	30.48
SRPC - 12 - 8	3/4	1/2	9.40	22.09	24.38	3.81	37.84
SRPC - 16 - 8	1	1/2	9.40	28.44	24.38	4.82	42.67
SRPC - 16 - 12	1	3/4	14.80	28.44	25.90	4.06	43.43

Installation Instructions

Port Connector

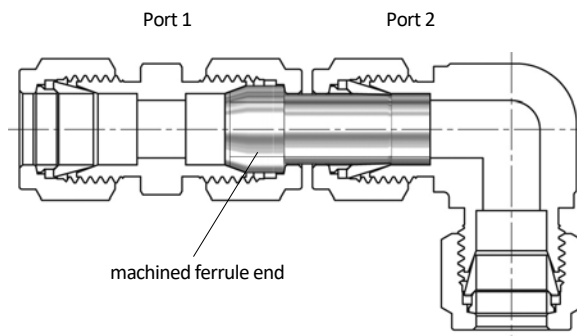

- Remove nut and ferrules from the first of two SUPERLOK ports to be connected.
- Slip nut (no ferrules) over machined ferrule end of port connector.
- Insert port connector into SUPERLOK port 1 and snug by hand.
Tighten with wrench 1/4 turn only. For 1/8 and 3/16 in., 2, 3, and 4mm tube fittings, tighten only 1/8 turn. Subsequent connections are made by tightening slightly with a wrench after snugging the nut by hand.
- Insert other end of port connector into SUPERLOK port 2 and tighten nut 1-1/4 turns from finger-tight. For 1/16, 1/8 and 3/16 in., 2, 3, and 4mm tube fittings, only 3/4 turn from finger-tight is necessary.

- Dimensions and Drawings are for reference only and are subject to change without prior notice.
 - Unless otherwise specified, all dimensions are in millimeters.
 - Sizes, pressure classes, and end connections not listed are available upon request.
 - Dimensions shown with SUPERLOK nuts finger-tight, where applicable.